



Glass Heater

GH 050/100/200/ 300/500



Instruction Manual



Technical Information

Model	Wattage	Aquarium Volume
-------	---------	-----------------

GH 050	50W	50L
GH 100	100W	100L
GH 200	200W	200L
GH 300	300W	300L
GH 500	500W	500L

- Before operating the appliance, please read this manual carefully and keep it properly for future reference.
- Follow the instructions and the “important safeguards” in this manual before use.
- Please be aware of the guarantee conditions which are found at the end of this section of the instruction booklet. This product is shipped to you in a factory sealed carton. Should the product malfunction in any way or if the unit is damaged and requires replacement, contact the retailer where the product was purchased for inspection.
- Do not discard packing material until the product has been assembled.


Important Safeguards

To guard against injury, basic safety precautions should be observed, including the following:

Read and follow all safety instructions and important notices in these instructions as well as on the product itself.

1. Appliance is not intended for use by person (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
2. Children should be supervised to ensure that they do not play with the appliance.
3. To avoid possible electric shocks, special care should be taken since water is employed in the use of aquarium equipment. For each of the following situations do not attempt repairs yourself. Return the appliance to an authorised service facility for service or discard the appliance.

- a. If the appliance or any electrical component of the appliance (non-immersible equipment only) falls into the water or gets wet, do not reach for it. Unplug it and then retrieve it.
- b. If the appliance shows any sign of abnormal water leakage, immediately unplug it from the power source.
- c. Carefully examine the appliance after installation. It should not be plugged in if there is water on parts which are not intended to be wet.
- d. Do not operate the appliance if it has a damaged cord or plug, or if it is malfunctioning, or dropped or damaged in any manner.
4. A “drip loop” (see graphic) should be arranged for each cable connecting an aquarium to a power supply. The drip loop is the part of the cable below the level of the power supply. It prevents water travelling down the cable and coming into contact with the power supply. If the plug or the socket does get wet, do not unplug the appliance. Disconnect the fuse or circuit breaker that supplies the power to the appliance, then unplug and examine for presence of water in the socket.
5. Always unplug the appliance from the electrical outlet when not in use, before putting on or taking off parts, before any type of maintenance or cleaning.
6. Never yank the cable to pull it from the socket. Pull the plug carefully to disconnect.
7. Do not use the appliance for reasons other than the intended use. The use of attachments that are not recommended or sold by the manufacturer may cause the product to be unsafe. This is not recommended.
8. Do not install or store the appliance where it will be exposed to weather or temperatures below freezing.
9. Make sure any component mounted on a tank is securely installed before operating it.
10. Ensure input voltage is the same voltage as your local power supply.
11. If an extension cable is used it should have the proper rating. Care should be taken to arrange the cord so that it will not be tripped or pulled.
12. A G.F.C.I (Ground fault circuit interrupter) & surge protector is recommended for all electrical appliances.
13. Ensure your hands are dry when turning the power switch on/off and when inserting/removing the power cable from the socket.
14. If you are in any doubt about the electrical installation or safety of this product you must consult a qualified electrician.
15. If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.

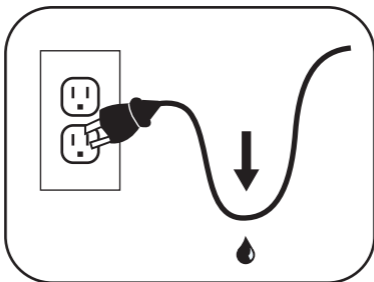

Setup Instructions

1. Select the proper wattage heater for your aquarium. Normally 1 watt will heat 1 litre of water. For example a 200W heater is required for a 180 to 200L aquarium.
2. Position the heater in the aquarium. The best position is near a strong water flow. The outlet of a power filter is ideal.
3. The heater should not come in contact with the gravel or substrate. This may cause a hot spot on the glass and cause the heater to crack.
4. Use the heater guard provided to fasten the heater to the aquarium. Heater should be pushed firmly into the heater guard and suction cups should be secured to the aquarium wall.
5. Do not plug the heater in unless submersed in water.
6. Plug the power cord into the power socket and arrange a “drip loop” and turn on.
7. To set the heater, use the Dial at the top of the heater to adjust to the desired temperature. Continue turning the Dial until the preferred temperature is displayed on the front of the heater. A light will come on when the heater is working, It will switch off when it reaches the set temperature.
8. Confirm your set temperature with an accurate thermometer. The thermometer should be placed at the opposite end of the aquarium to the heater. A small variation between the heater’s set temperature and the thermometers reading is normal.

Tips

1. Always disconnect the heaters power supply prior to working on the aquarium.
2. If removing the heater from the aquarium, turn it off at the power supply, wait 10-15 minutes to allow it to cool, and then remove it from the aquarium.
3. If the heater is cracked and/or has moisture inside it, disconnect it from the power supply.
4. A surge protector is recommended for all aquarium appliances.
5. Do not operate your Aquamanta heater when it is not submerged in water.
6. The water level must be maintained at the minimum water level line at all times.
7. For indoor use only.

Troubleshooting

HEATER DOES NOT WORK

1. Ensure the plug is inserted correctly and the switch is in the on position.

THE LED IS WORKING, BUT THE HEATER IS NOT HEATING THE AQUARIUM

1. Check that the Dial is set on the desired temperature.
2. Double check the thermometer. Use a second one.
3. Ensure the thermometer is not near the heater. Relocate the thermometer to the opposite end of the aquarium.
4. Return the unit to the place of purchase for further inspection.

THERE IS WATER INSIDE THE HEATER

1. Turn the power off at the main power supply, unplug the unit and remove it from the aquarium. If the unit is still under guarantee return it to the place of purchase for further inspection, Other wise cut the cord and dispose of as per below.

Disposal of used Electrical & Electronic Equipment (Applicable in the European Union and other European countries with separate collection systems)



This symbol on the product or on its packaging indicates that the product must not be disposed of with normal household waste. Instead, it is your responsibility to dispose of your waste equipment by arranging to return it to a designated collection point for the recycling of waste electrical and electronic equipment. By separating and recycling your waste equipment at the time of disposal you will help to conserve natural resources and ensure that the equipment is recycled in a manner that protects human health and the environment. For more information about recycling this product, please contact your local city office, your household waste disposal service or the shop where you have purchased the product.

Guarantee

The additional 1 Year Extended Guarantee applies when you REGISTER online with Aquamanta. Register your Extended Guarantee at www.aquamanta.com.au

About this Guarantee

The Manufacturer or Distributor, of Aquamanta goods, is collectively known herein as "Aquamanta". Please refer to contact details for Aquamanta below or on the applicable Aquamanta website. Any product that is covered by its own Guarantee (as enclosed with the product) is subject to the conditions of that Guarantee.

The benefits given to the purchaser, under Guarantee, are in addition to all other statutory rights and remedies which the purchaser has in respect of goods under legislation in the applicable country of purchase. This Guarantee shall not affect any such rights and should be read subject to such legislation.

1.0. Terms and Conditions of Guarantee.

1.1. Aquamanta warrants to the purchaser, for 2 Years from date of original purchase, to repair or replace goods where fault is found due to defective materials or faulty workmanship and where goods do not operate in accordance with the instructions.

1.2. All claims for repair or replacement must be made at place of purchase.

1.3. The original and dated Proof of Purchase (receipt) must be supplied with all goods claims. Please also provide this Guarantee where possible.

1.4. The Guarantee covers the Aquarium against gluing breakdown resulting in leakage.

1.5. All goods subject to claim under Guarantee should be prepared for transportation in the original packaging or other comparable packaging which offers the same degree of protection.

1.6. Where goods are repaired or replaced under Guarantee, these goods are Guaranteed for the remainder of either the original Guarantee or Extended Guarantee period.

1.7. Where claims on inspection reveal goods are in normal working order, Aquamanta will request reimbursement of all reasonable costs incurred.

2.0. Other Terms and Conditions - Extended Guarantee

2.1. The Extended Guarantee period is for an additional 1 Year and commences on expiration of the standard guarantee period.

2.2. Application for Extended Guarantee is FREE of any registration cost to the purchaser on completion of the Extended Guarantee questionnaire which is found on the applicable Aquamanta website (refer below).

2.3. Upon receipt and acceptance of the questionnaire, Aquamanta will forward (by way of email) a Certificate of Extended Guarantee to the purchaser.

2.4. For more information on how we collect, hold, use and disclose personal information provided to us, please refer to our Privacy Statement on the Aquamanta websites or write to our Privacy Officer, in your country of purchase.

2.5. Where Aquamanta determines goods are being used in a manner contrary to the instructions,

specifications or this Guarantee, Aquamanta reserves the right to terminate Extended Guarantee for such goods and will provide written notice to the purchaser.

3.0. Exclusions and Limitations

Where permitted by local law, the following exclusions and limitations apply in regard to Guarantee:

3.1. Goods claims where fault is due to, but not limited by a) misuse b) neglect c) abuse d) fire or flood e) normal wear and tear f) accidental breakage g) Acts of God h) mains voltage fluctuation or supply problems i) connection to any voltage other than what is stated on the rating plate j) modification or tampering to electrical cord or plug, k) vermin, insects or foreign object l) liquid spillage or submersion of goods not designed to sustain such use or duress.

3.2. Where inspections reveal goods are in normal working order including where noise or vibration is consistent with normal goods operation.

3.3. Attempted repairs or modifications by unauthorised persons, including but not limited to the drilling of holes in the aquarium glass by unauthorised persons.

3.4. Where the goods factory rating plate has been removed, altered, damaged or is rendered illegible.

3.5. Where goods are not installed, operated or maintained in accordance with Aquamanta's goods instructions, specifications or this Guarantee.

3.6. Replacement or repair of worn consumables or replacement of lost goods, parts or components.

3.7. Costs associated with goods transportation, removal, installation, postage or cost of insurance.

3.8. Any damage incurred whilst installing, transporting or moving the goods.

3.9. Subject to certain local statutory rights and obligations to the contrary, and this guarantee shall not affect those rights or obligations, where, to the full extent permitted by law: 1. all express and implied warranties and conditions under statute or general law, are expressly excluded and Aquamanta, where permitted, will limit liability as follows and at Aquamanta's option to: in regard to goods either a) the replacement of goods or supply of equivalent goods b) the repair of goods or the cost of replacing the goods or of acquiring equivalent goods OR in regard to services either c) the re-supply of services d) the cost to re-supply services.

2. Aquamanta will not be liable for any loss or damage, including consequential loss or damage either directly or indirectly, or for any incidental expenses, of any kind, and in any way whatsoever.

The additional 1 Year Extended Guarantee applies when you REGISTER online with Aquamanta. Register your Extended Guarantee at www.aquamanta.com.au

(1) Consumables include items such as filter media/ cartridges, impellers and shafts.

Aquamanta may be contacted in: Australia Kong's (Aust.) Pty. Limited PO Box 863, Ingleburn 1890 NSW Australia



aquamantaTM
the experts in aquatic technology

Manufactured in China
Aquamanta and Kong's are
registered trademarks of Kong's
(Aust.) Pty Limited.
www.aquamanta.com.au



Instruction version: 23/09/2011